



iVIEW-1500LEDTV

# USER'S MANUAL



## 15" LED TV WITH MULTI-MEDIA FUNCTIONS

To assure the product to work in best status

 
Please read the users manual carefully before operation and keep it well for future use



Thank you for purchasing iVIEW products, for more information or to purchase new products, visit us on ***WWW.IVIEWUS.COM*** or call: **(909) 627-9888**.



MODEL# iVIEW-710TPC

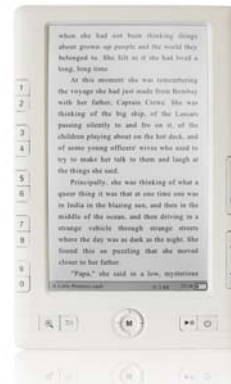

MODEL# iVIEW-700EB-T



MODEL# iVIEW-701NB



MODEL# iVIEW-007DK



MODEL# iVIEW-001BKS



MODEL# iVIEW-970PDVX



MODEL# iVIEW-352PTV



MODEL# iVIEW-368PTV



MODEL# iVIEW-950PDTV



13"/15"/19" LEDTV



MODEL# iVIEW-100MHB



MODEL# iVIEW-2000STB



MODEL# iVIEW-300PK



MODEL# iVIEW-1000KOD

TABLE OF CONTENTS

INTRODUCTION ..... 2

REMOTE CONTROL ..... 3

SETUP ..... 5

TELEVISION SETUP ..... 6

TELEVISION ..... 7

DVD AND CD ..... 8

USB PORT AND MEMORY CARD READER ..... 9

SPECIFICATION ..... 10

For technical support or more information  
please visit us on **WWW.IVIEWUS.COM**  
or CALL US at **(909) 627-9888**

 
INTRODUCTION

**EJECT**  
Press to eject the loaded disc from the DISC DRIVE.

**PLAY/PAUSE**  
Press to play or pause a loaded disc.

**VOLUME**  
Press to adjust the volume.

**CHANNEL**  
Press to adjust the television channel.

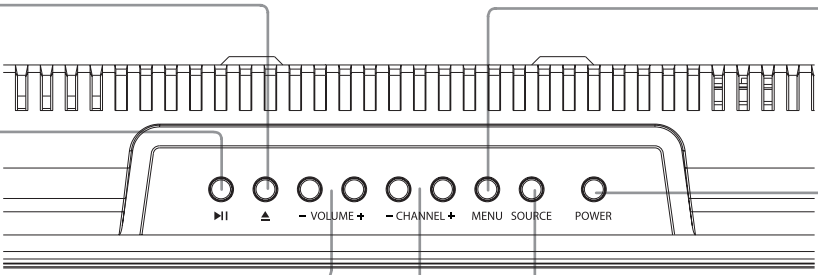

**MENU**  
Press to access the television menu.


**POWER**  
Press to power the television off or on.

**SOURCE**  
Press to adjust the television source.

**DISC DRIVE**

 **USB PORT**

**SD/MMC/MS MEMORY CARD READER**

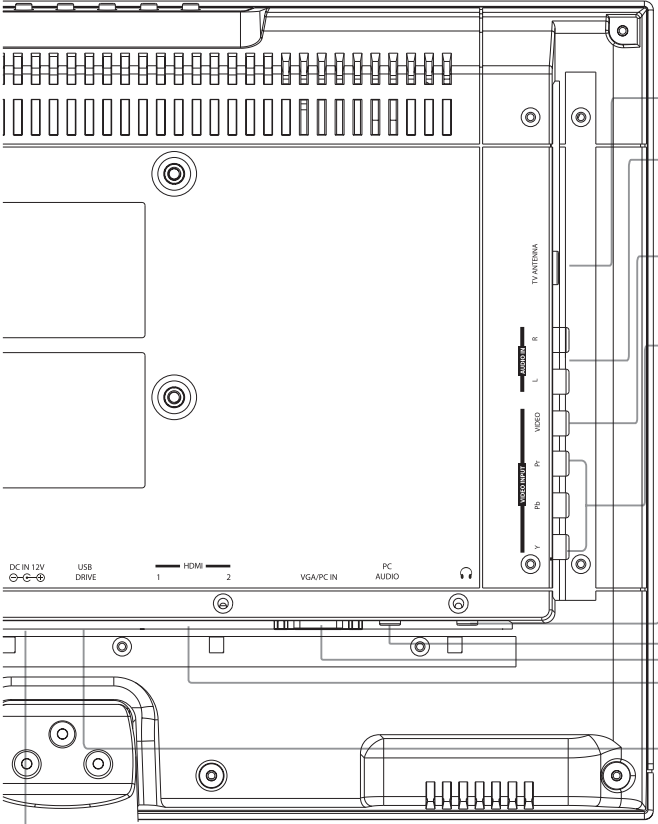

**RF INPUT**

**RCA STEREO AUDIO INPUT**

**COMPOSITE VIDEO INPUT**

**COMPONENT VIDEO INPUT**

**STEREO HEADPHONE JACK**

**PC AUDIO INPUT**

**VGA/PC INPUT**

**HDMI INPUTS**

**USB DRIVE**  
Use for connecting a thumb drive or for software updates.

**DC POWER INPUT**

## REMOTE CONTROL

### 1. POWER

Press to power the television on or off .

### 2. NUMBER KEYPAD

Press to select a particular channel instead of using the UP and DOWN button.

### 3. SLEEP

Press repeatedly to set the sleep timer. After the set time has expired the television will automatically power off.

### 4. ASPECT

Press to adjust the aspect ratio among FULL, NORMAL, WATERGLASS and CINEMA.

### 5. VOLUME

Press to adjust the volume.

### 6. PICTURE

Press to adjust the picture among STANDARD, MOVIE, USER, and DYNAMIC. The user mode can be customized by accessing Picture Settings in the menu.

### 7. MENU

Press to view the television setup menu.

### 8. AUDIO/SAP

Press to cycle among the available audio settings in DVD mode. In TV mode, press to switch to alternative audio option which supported.

### 9. ARROW KEYS

In setup mode, use to navigate selection in on-screen menus.

### 10. ENTER

Press to select or confirm an item when using the on-screen menus.

### 11. DISPLAY

Press to view the on-screen display.

### 12. FAV LIST/PLAY/PAUSE

In TV mode, press to view your favorites list. In DVD mode, press to play or pause the loaded disc.

### 13. ADD/ERASE/STOP

In TV mode, press to add or erase the current channel as a favorite. In DVD mode, press to stop the current disc during play.

### 14. CH LIST/SKIP

In TV mode, press to view a list of available channels. In DVD mode, press to skip between chapters.

### 15. AUTO/SKIP

 
In PC mode, press to tune the position of the screen automatically. In DVD mode, press to skip between chapters.

### 16. SLOW

During DVD play,press to slow motion playback,press play to resume normal playback

### 17. DVD SETUP

In DVD mode, press to access the DVD setup menu.

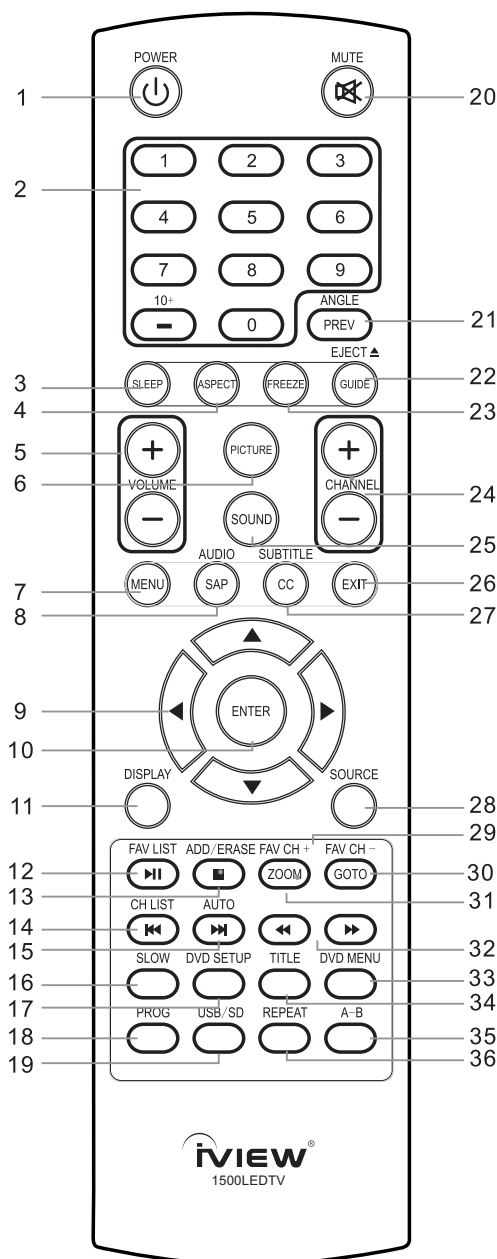

## REMOTE CONTROL

### 18. PROGRAM

Press to program the loaded disc to play chapters or tracks in a specified order.

### 19. USB/SD

In DVD mode, press to switch between USB and SD card mode.

### 20. MUTE

Press to mute the sound, press again will restore the sound.

### 21. ANGLE/PREV

Press to view alternate angles on supported DVDs. In TV mode, press to switch to the previous channel.

### 22. EJECT/GUIDE

In DVD mode, press to eject the loaded disc. In TV mode, press to view the on screen television guide.

### 23. FREEZE

Press to freeze or unfreeze the current frame in DVD mode or TV mode.

### 24. CHANNEL

Press to adjust the television channel.

### 25. SOUND

Press to adjust the sound among STANDARD, SOFT, USER, and DYNAMIC. The user mode can be customized by accessing Sound Settings in the menu.

### 26. EXIT

Press to exit the current menu.

### 27. SUBTITLE/CC

Press to cycle through available subtitle settings in DVD mode. Press to view the closed captioning in TV mode.

### 28. SOURCE

Press to view the available television sources. Press the ARROW and ENTER buttons to adjust the current television source.

### 29. FAV CH +/-

Press to cycle among saved favorite channels in TV mode.

### 30. GOTO

In DVD mode, press to go to a specified title, chapter, and time.

### 30. SEARCH

Press to search through the current chapter or track.

### 31. ZOOM

In DVD mode, press to zoom in or out on the current screen.

### 32. DVD MENU

Press to access the DVD menu on a loaded DVD.

### 33. TITLE

Press to access the title menu on a loaded DVD.

### 34. A-B

While playing a DVD, press to set a specified section of DVD to repeat.

### 35. REPEAT

 
Press to repeat the current chapter or track the entire disc.

## SETUP

### Power


DC power input: requires an AC/DC power adapter (included).

Plug the included AC/DC power adapter into the DC POWER INPUT and a standard AC power outlet to power the television.

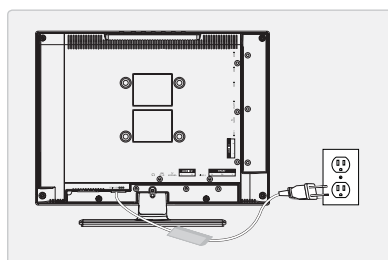

### Remote Power

 Requires 2, AAA size batteries.

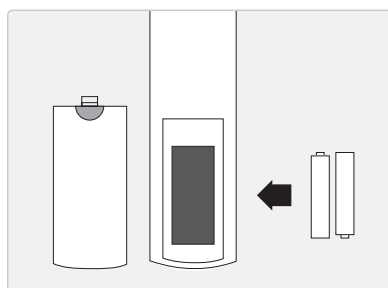

## TELEVISION SETUP

### Connecting a TV Antenna

Requires a TV antenna, not included.

1. Connect a VHF, UHF, or HDTV antenna to the TV ANTENNA on the LED television.

### Scanning for Channels

After connecting your TV Antenna or Basic Cable you need to scan for channels before you'll be able to watch any television.

1. Connect a TV Antenna or Basic Cable to the LED television.
2. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
3. Press the MENU button to access the Setup Menu.
4. Press the DIRECTION (◀ ▶) buttons to select the CHANNEL tab.
5. Press the DIRECTION (▲ ▼) buttons to select AIR/CABLE. Press the DIRECTION (◀ ▶) buttons to select AIR or CABLE.
6. Press the DIRECTION (▲ ▼) buttons to select AUTO CHANNEL SEARCH.  
Press the ENTER button.

Your LED television will automatically begin scanning for available channels.



## TELEVISION SETUP

### Channel List View

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the LIST button, on the remote, to view a list of available channels. Unless you are using a Set-Top Box, you must auto scan for channels before being able to view channels in list view.

### Adding Favorites

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the MENU button to access the Setup Menu.
3. Press the DIRECTION (◀ ▶) buttons to select the CHANNEL tab.
4. Press the DIRECTION (▲ ▼) buttons to select Favorite List. Press the ENTER button to enjoy your favorite program.
5. Press the CHANNEL (+ -) buttons to select available channels and press the ADD/ERASE button to save those channels as favorites. Channels added to the Favorites list will show a check next to their name.

### Viewing Favorites

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the "FAV List" button, on the remote, to view a list of channels saved as favorites.
3. Press the DIRECTION (▲ ▼) and ENTER buttons on the remote to highlight and select a channel to go to.

### Parental Controls (V-Chip)

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the MENU button.
3. Press the DIRECTION (◀ ▶) buttons, select PARENTAL, and press the ENTER button.
4. The default password for the parental lock is: 0000
5. Enter the password to access the PARENTAL preferences.
6. From this menu, you can lock specific ratings from the United States rating system or the Canadian rating system by turning the SYSTEM LOCK to ON or OFF.

## TELEVISION

### Television Menu

Press the MENU button to access the TV menu.

Press the EXIT button to exit the TV menu.

#### Picture

Picture Settings

Screen Settings

PC Settings

Color Temperature

Advanced Picture Settings

#### Sound

Sound Settings

Surround Mode

Analog Sound

Digital Sound

Other Settings

Equalizer settings

#### Channel

Channel List

Favorite List

Channel Setting

Signal Type

Auto Channel Search

#### Parental

Lock Parental Control

V-Chip

Change Password

Front Panel Lock

Source Lock

#### Setup

Closed Caption

Menu Language

Clock

#### Others

Blue Back

No Signal Power Off

No Operation Power Off

All Reset

Audio Only

## **DVD AND CD**

### **Loading a DVD or CD**

- 1 Gently insert a DVD/CD (with the label side facing the front of the television, see the indicator above the DVD bin gate) into the slot-load disc drive. Once a DVD or CD is loaded into the television, the TV will automatically switch to DVD mode.

### **Playing a DVD or CD**

1. Follow the instructions for Loading a DVD or CD.
2. After the DVD or CD is loaded, it will begin playing automatically.  
If the DVD or CD does not begin playing automatically, press the PLAY/PAUSE button to begin playing the loaded disc.

### **Programming a DVD or CD**

1. While a DVD or CD is playing, press the PROGRAM button on the remote.
2. Using the NUMBER KEYPAD enter in the title (T) and chapters (C), or tracks in the order you want them to play.
3. Highlight the on-screen START button using the ARROW buttons and press the ENTER button.
4. The programmed titles and chapters, or tracks will now play in the designated order.
5. To cancel a program, press the PROGRAM button, highlight the on-screen STOP button using the ARROW buttons, and press the ENTER button.

### **DVD Setup Menu**

In DVD mode, press the DVD SETUP button to access the DVD setup menu. Press the DVD SETUP button to exit the DVD setup menu.

 
#### **General Setup page**

TV Display  
OSD Lang  
Screen Saver  
Last Memory

#### **Preference pages**

TV Type  
Audio  
Subtitle  
Disc Menu  
Parental  
Password  
Default

## USB PORT AND MEMORY CARD READER

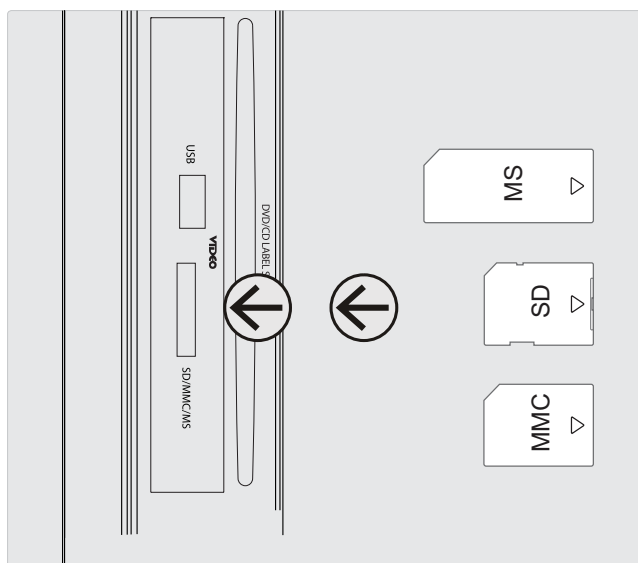


### Connecting a Memory Card

1. Load an SD, MS, or MMC memory card into the MEMORY CARD READER as shown in the image to the right.

### Using a Connected Memory Card

 1. Follow the instructions for Connecting an SD, MS, or MMC card.
2. Press the SOURCE button to switch to DVD mode.
3. Press the USB/SD button on the remote to switch to the connected memory card.
4. Use the ARROW and ENTER buttons to select and play content from the connected memory card.

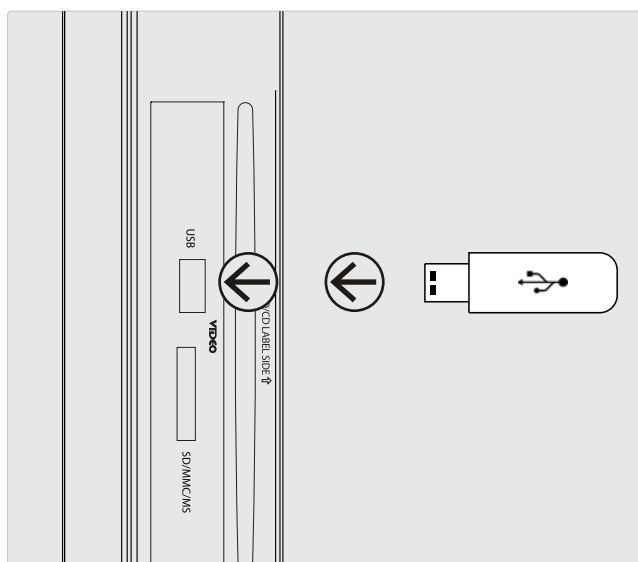

### Connecting a USB Thumb Drive

1. Load a USB thumb drive into the USB PORT as shown in the image to the right.

### Using a Connected USB Thumb Drive

1. Follow the instructions for Connecting a USB thumb drive.
2. Press the SOURCE button to switch to DVD mode.
3. Press the USB/SD button on the remote to switch to the connected USB thumb drive.
4. Use the ARROW and ENTER buttons to select and play content from the connected USB thumb drive.

## SPECIFICATION

### Panel

Size: 15.6 inch LED screen  
Max, Resolution: 1366x768  
Aspect Ratio: 16:9, Wide XGA  
Brightness (TYPE): 220cd/m<sup>2</sup>

### TV System Spec

TV System: NTSC-M, ATSC (8VSB/64QAM/256QAM(J.83B))  
Receive Channe: CH2-CH69 AIR, CH1-CH135 CABLE  
Picture Mode: Standard/Movie/User/Dynamic  
Audio Effective: Soft / Dynamic / Standard / User

### TV Performance

Comb Filter: 3D  
Child Lock: YES  
Card Reader  
DVD Function  
USB Reader

### ATSC Spec

Support SCAN, EPG, Closed Caption for ATSC  
Demodulation: 8VSB/64QAM/256QAM(J.83B)  
Receiving Modulated Signal: Digital Reception VHF & UHF Band  
Input RF Signal AV Format: MPEG-2 MP @ ML MP@HL  
Audio Output: L/R Channel, Stereo

### Main Features

Supports 1080P De-interlace  
Amplifier: YES  
Speakers: 2x3W

### Connector

RF Input (ATSC): X1  
CVBS Input: X1  
Headphone Output: X1  
Y/Pb/Pr Input: X1  
PC Audio Input: X1  
PC Analog Port (VGA): X1  
HDMI Input: X2  
USB Driver: X1 (Upgrade)  
USB Reader: X1

### Power Supply

Power Input: AC-DC Adapter 12V $\overline{=}$ 4A  
Max. Power Consumption: <48W  
Standby Power Consumption: <3W